






What to do if...  
What to do if...

	A tire punctures	P. 374	If you have a flat tire
	The engine does not start	P. 383	If the engine will not start
		P. 70	Engine immobilizer system
		P. 389	If the vehicle battery is discharged
	The shift lever cannot be moved out	P. 384	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 392	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 385	If you lose your keys
	The battery runs out	P. 389	If the vehicle battery is discharged
	The doors cannot be locked	P. 37	Doors
	The horn begins to sound	P. 72	Alarm
	The vehicle is stuck in mud or sand	P. 395	If the vehicle becomes stuck



A warning light or indicator light comes on

P. 350

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 350



Malfunction indicator lamp

or



P. 351



"ABS" warning light

or



P. 351



Driver's seat belt reminder light

P. 353



Front passenger's seat belt reminder light

P. 353



Low fuel level warning light

P. 353



Master warning light

P. 353



SRS warning light

P. 351



Electric power steering warning light

P. 351



Open door warning light

P. 353



Pre-collision system warning light

P. 351



Charging system warning light

P. 351



Tire pressure warning light

P. 353



Automatic transmission fluid temperature warning light

P. 353



A warning message is displayed

P. 360

If a warning message is displayed